#### Landscape



Mode selection Function selection















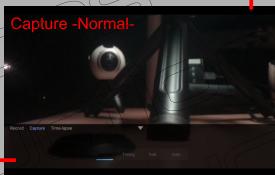




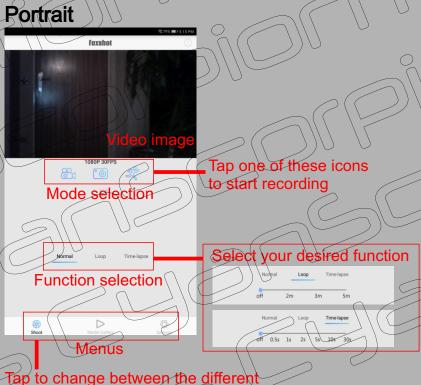

Tap to change between the different menus (Record - Gallery - Settings)

Foxshot camera settings
Main Window (ver. f.9)

#### Video parameters

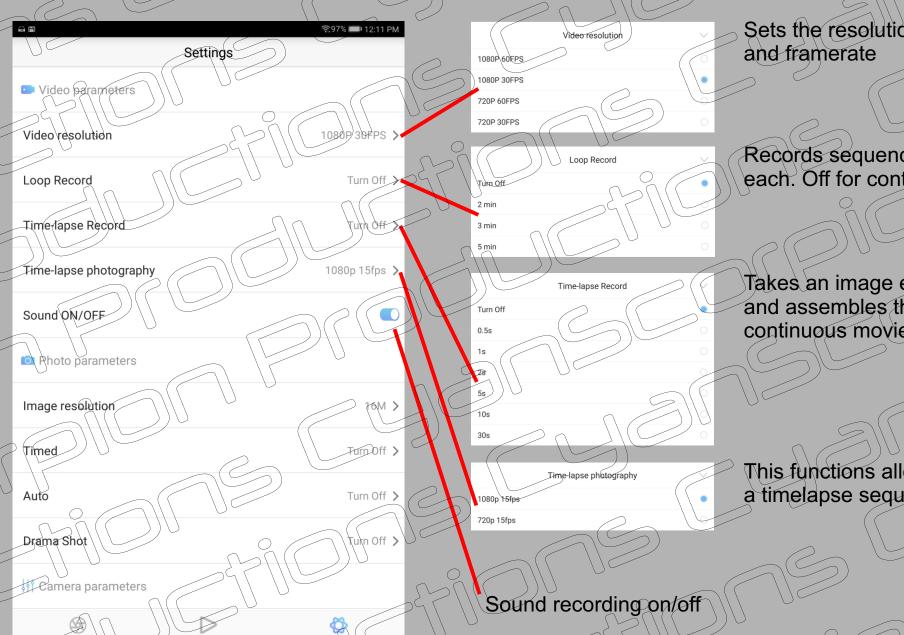


Sets the resolution

Records sequences of x minutes each. Off for continuous recording


Takes an image every x seconds and assembles them into a continuous movie

This functions allows you to create a timelapse sequence


#### Photo parameters

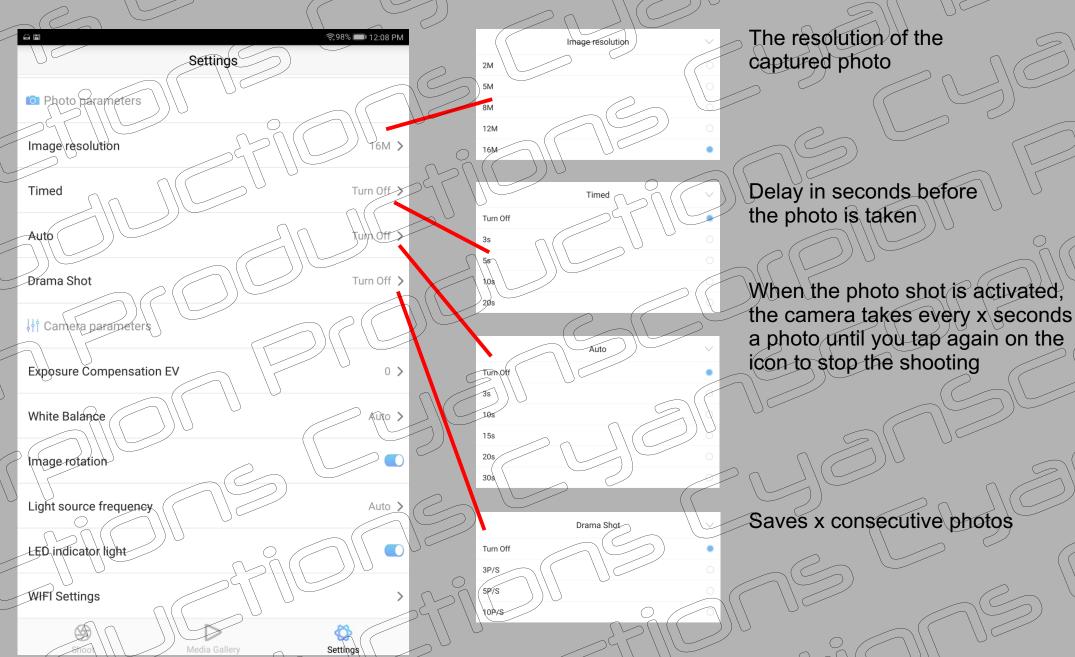

#### General parameters 1

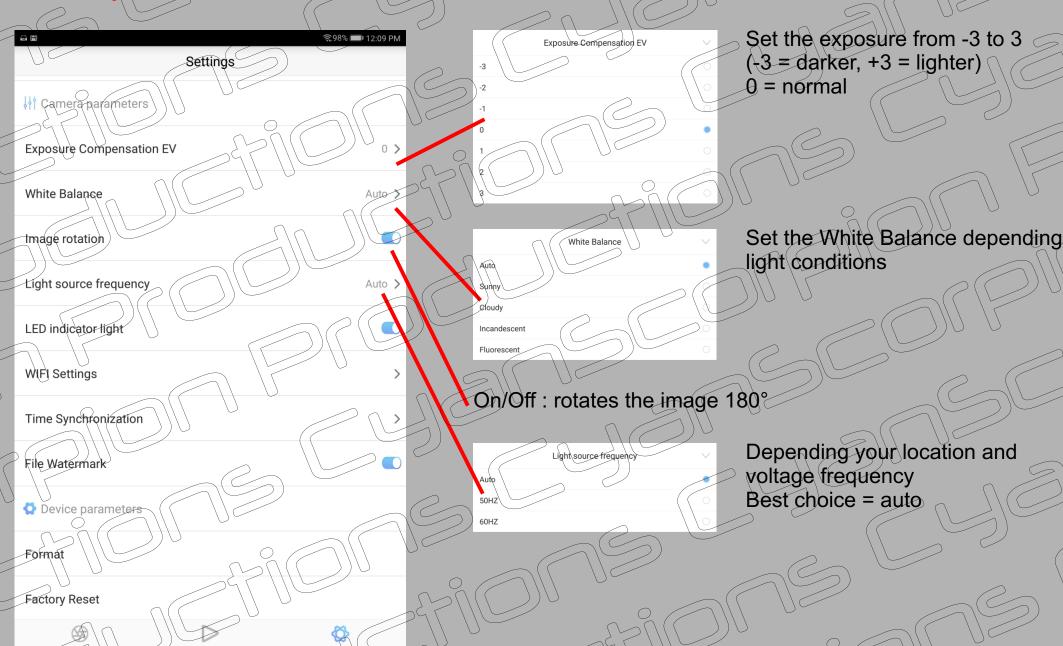

#### **General parameters 2**

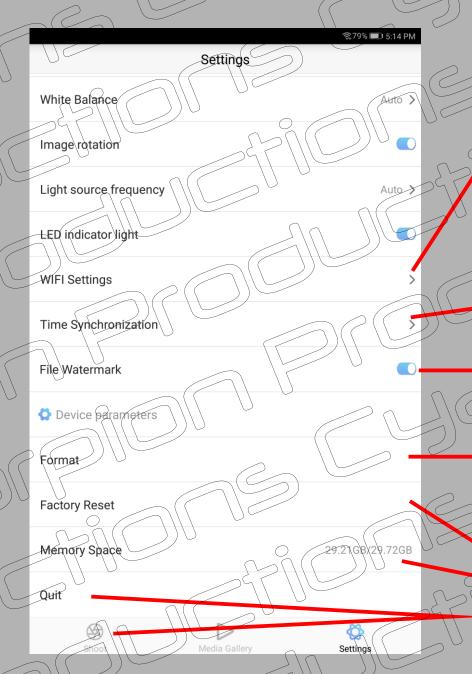



Here you can define the SSID as well as your own password.
Default password is '12345678' and not '666666666'



Tapping this parameter sets the correct time

Display or hide the time stamp



Format the SD card

Resets the camera to its original settings

Memory usage

Tap 'Quit' to save the values and exit the app. I nevertheless suggest to tap on the 'Shoot' icon to return to the main window