

Menu Structure

Menu structure

Video display



Photo display



Gallery



Setup menu



Video Menu

Video menu 01



Set the video resolution



Partitioning of the recording into time-defined video sequences. When set to 'Off', the length of the each sequence corresponds to the length of the continuous recording



Allows automatic recording when the engine is started. The recording stops and the camera turns off when the engine is turned off.



Takes every x seconds an image. On stop, all the images merged together to obtain a continuous time lapse video

Video menu 02



Sets the slow motion speed relative to the normal speed



When recording a video, the device records a photo every x seconds. Each time a photo is taken, a window with the mention 'still' is displayed on the screen



If this mode is activated, the camera always records in vertical mode



When this function is activated, the camera in video mode will start recording directly. The counter is not running, the camera icon changes to red. If the record button is pushed, the counter starts to display the time elapsed between the automatic start of recording and the activation by the button.

Video menu 03



Sets a timer after recording has been stopped. If, for example, the timer is set to 5 seconds, the recording stops 5 seconds after stopping the recording manually



Anti-shake function



Allows you to record or not audio with video



Sets the audio recording volume

Video menu 04



Displays the date and time overlaid in the lower left corner




Display the SJCAM C200 logo overlaid in the lower right corner



Defines the maximum bit rate for the video to be recorded. The higher, the clearer the picture. However, the files then also become larger



The white balance. Adjustable depending on the light source

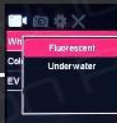

Video menu 05




The colour, according to your preferences



The exposure value according the light conditions

Photo Menu

Photo menu 01

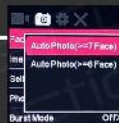

When set to 'on', the device must be triggered manually. If set to automatic, it will fire automatically based on the number of faces detected



Sets the resolution of the photo



Trigger a countdown before taking the photo



If enabled, take a photo every x seconds



Photo menu 02




Take x burst photos



Sets the quality of the images. The higher the quality, the larger the file will be





The white balance. Adjustable depending on the light source

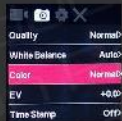

The colour. according to your preferences

Photo menu 03

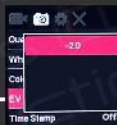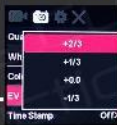


The exposure value according the light conditions



Displays the date and time overlaid in the lower left corner

Setup Menu

Setup menu 01

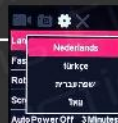

When this function is activated, you only need to push the button 1 time to turn on the camera. Normally you have to push the button for a few seconds before it turns on



This allows the camera to be rotated 180 degrees. The recording as well as the screen are displayed upside down. The objective is oriented downwards




Energy Saver: The time before the screen turns off

Setup menu 02




Power Saver: The time before the camera turns off completely

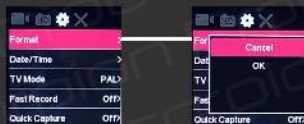

To format the micro-SD card. Use this function when you insert a new card for the first time



Before using the camera for the first time, be sure to set the date and time

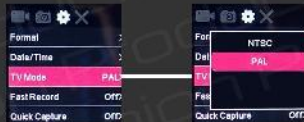

Defines the TV standard used in your country



Setup menu 03



Directly start recording when the camera is powered on



Automatically take a photo when the camera is turned on or when switching to photo mode



Used for live transmission




Here you can activate or deactivate the beep sound when using the buttons

Setup menu 04



Screen to change the SSID of the camera

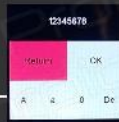

Screen to change the WiFi password



Use to adjust the frequency according to your country



To activate a remote control, such as the SJCAM remote control watch

Setup menu 05



Reset camera settings to factory default



Camera model and firmware data

Exit Menu

Exit menu



Press the power button to exit all settings