



The menu button is used to navigate between the different settings. Can also be used for pairing

Camera status Led

Led Indicator

Right microphone

Power button to turn the Gear 360 on or off. Also used as the return menu button.

Speaker

NFC Antenna

Camera status Led

Left microphone

Cover





The top button is used to record a video or take a photo. It is also used to confirm the selected menu setting.


The status screen is used to display all kind of informations like the current shooting mode, the connection status, the battery power or charging status and the available recording time or remaining photos. It also displays the menu and sub-menus settings and the selected mode.










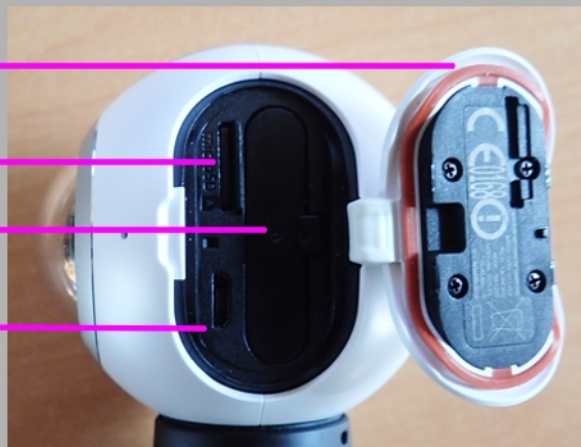



Cover with rubber seal

SD-card slot

Battery

Micro-USB plug



	Bluetooth Connection
	Bluetooth pairing devices
	End of pairing bluetooth devices
 	Video or Photo Mode
	Video Recording
 5s	Time Lapse - photo interval shot to produce a single video
	Time lapse video recording
 5m	Video looping mode and looping time
  	Memory card full - No memory card - Memory card error
 	Computer connected - USB connection error
	Connected to Google Street View
	Battery Power Level
  	Battery charging - Overheating - Bad charger connection

For more informations, please download the Samsung Gear 360 manual

Samsung Gear 360 specifications

Camera / Lens

Two CMOS 15 megapixel fisheye cameras Image, Processor DRiME5s - **F2.0 fisheye lens**

Video

MP4 (H.265) – Dual Lens: 3840×1920 (30fps) - **Single Lens: 2560×1440 (30fps)**

Image

JPEG – Dual Lens: 30M **(25.9M)** **(30.2M)** (7776×3888) - **Single Lens: (5M) (5.3M) (3072×1728)**

Resolution

Video single camera :1280x720 (30fps), 1920x1080 (30/60fps), 2560x1440 (30fps)

Video double camera :1920x960 (30fps), 2560x1280 (30/60fps), 2880x1440 (30fps), 3840x1920 (30fps)

Audio Codec

MP3/AAC/AAC+/eAAC+Format: MP3, M4A, AAC, OGG

Memory

microSD card (Up to 128Gb) - **(Up to 200Gb), 1Gb RAM**

Display

Display- 0.5" (72 x 32) PMOLED

Shooting Mode

Video, Photo, Time Lapse Video, Looping Video

Camera Mode

Dual/Single Lens modeCamera Setting – Sharpness, White Balance, HDR, EV, ISO limit,

Wind cut, IP53 Certified Dust and Water Resistant

Samsung Services

Samsung Gear 360 App, PC S/W (Gear 360 ActionDirector)

Connectivity

WiFi 802.11 a/b/g/n/ac (2.4/5GHz), WiFi Direct, Bluetooth v4.1, USB 2.0, NFC

Sensor

Accelerometer, Gyroscope

Weight / Dimensions

153g (including battery), Dim.: 66.7×56.2×60 mm - **152g (including battery), Dim.: 66.7×56.3×60.1 mm**

Battery

1,350mAh Li-ion

Source : <http://www.roadtovr.com/> - <http://www.samsung.com/> - Actual values